




QWALL – 5

SHOWER ACRYLIC WALL INSTALLATION INSTRUCTIONS

IMPORTANT


DreamLine™ reserves the right to alter, modify or redesign products at any time without prior notice. For the latest up-to-date technical drawings, manuals or any other details please refer to the support.BathAuthority.com web page.

Please Choose Your Style According To Your Order For Proper Manual.

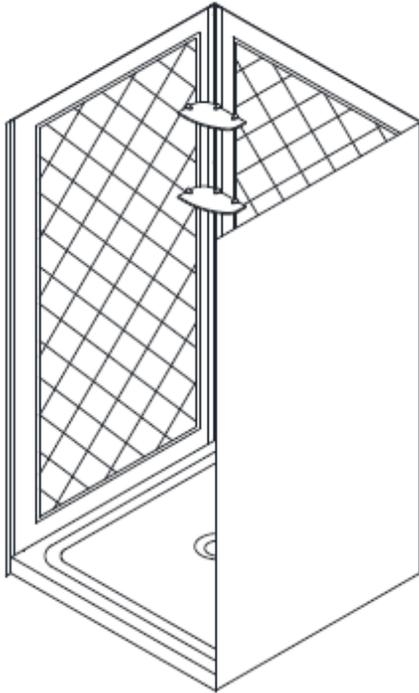

QWALL – 5 (1 Back Panel)

SHBW-1434743-01 (30" to 34" W)
SHBW-1438743-01 (34" to 38" W)
SHBW-1450743-01 (46" to 50" W)

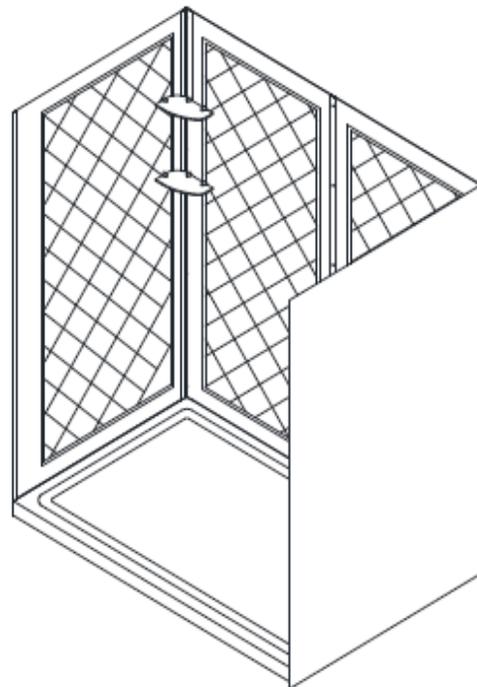

QWALL – 5 (2 Back Panels)

SHBW-1462743-01 (58" to 62" W)

Please read these instructions carefully before installing. If you have any questions regarding installation, please call our technical support specialists Monday through Friday 9:00 AM – 5:00 PM EST at Phone: [1-866-731-2244](tel:1-866-731-2244), Fax: [1-866-227-1533](tel:1-866-227-1533) or e-mail our technical support group at support@BathAuthority.com.

For more information on [DreamLine™ Shower Back Wall](http://www.BathAuthority.com) please visit www.BathAuthority.com